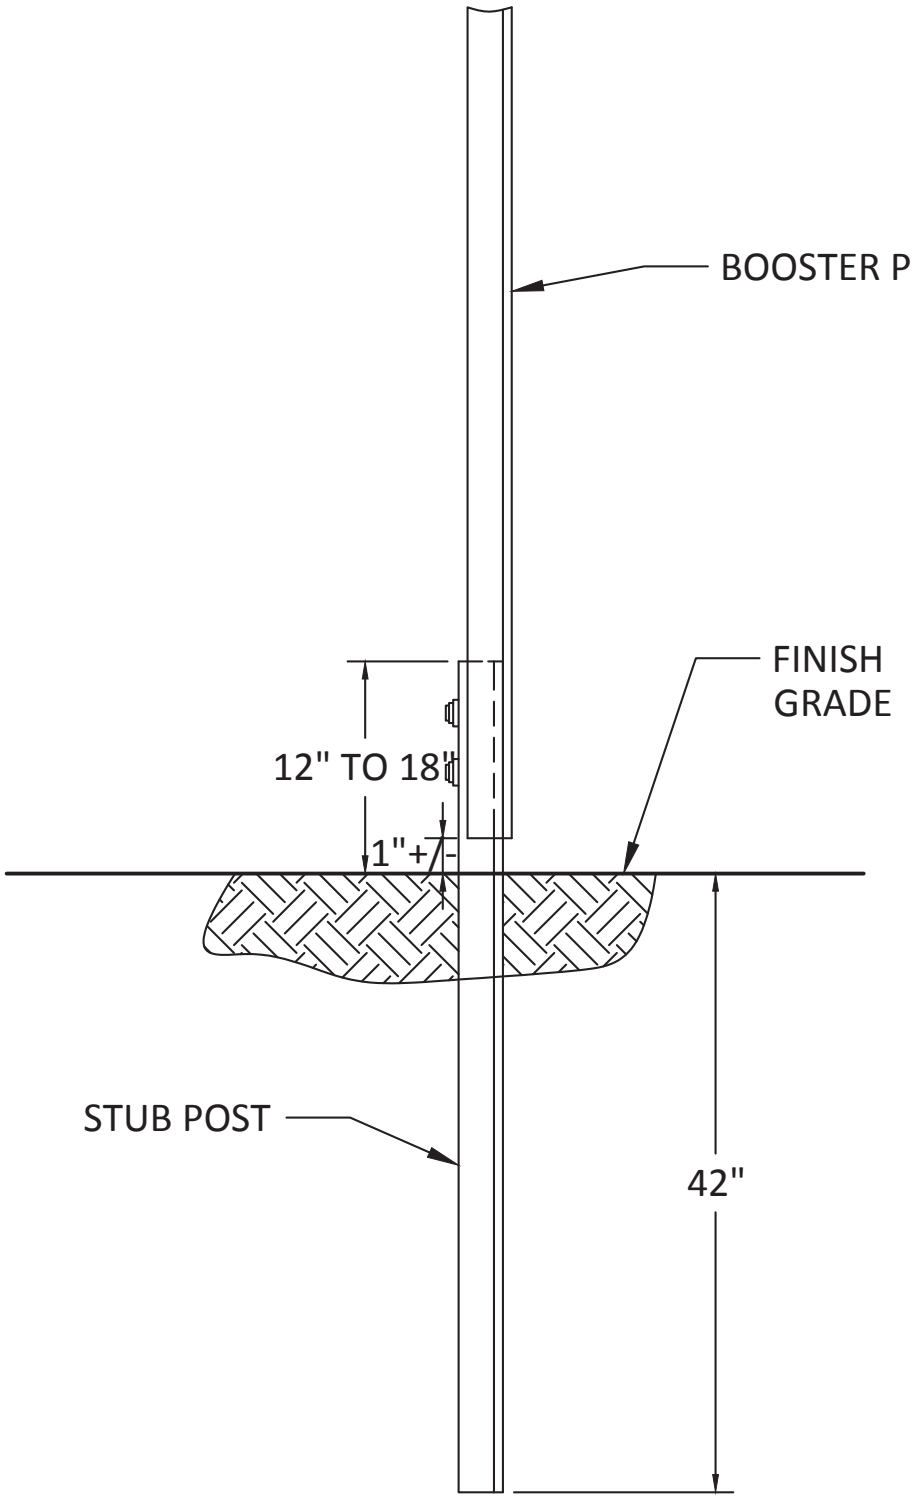


NOTES:

1. ALL SIGNS AND SIGN SUPPORTS SHALL BE PER ODOT CMS 630.
2. BOLTS SHALL BE STEEL AND SHALL BE LOCATED IN THE TOP HOLE OF THE STUB POST.
3. A MINIMUM OF TWO FASTENERS SHALL BE USED PER ASSEMBLY.
4. ALL POST SHALL #3 U-CHANNEL POST.
5. BOOSTER POST SHALL BE MOUNTED IN FRONT OF STUB POST.
6. LUBRICATE ALL BOLTS AND SCREWS (ALUMINUM OR STEEL) FOR SIGN INSTALLATION WITH A COMPOUND TO PREVENT SEIZING.

EST 1808 CITY OF DELAWARE OHIO Public Works Department	STANDARD DETAIL SIGN POST INSTALLATION	ROADWAY RDWD-37.0 Issued 12/31/2018